






Load data from Job Card into the CP1-04 console.

1. Press the data Transfer Button 
2. Press the Load Job from Job Card button 
3. Press the Load to Console Memory button 
4. Press the OK button 

After loading the job to the to the console memory, send the ink key position to the ink keys:

1. Press the Positioning button 
2. Select the Job that you would like to position to the ink keys
3. Press the OK button 