

Digital Information Ltd.

**Quick start manual
InkzoneTape
for
Planeta Press with
Fuji console**

January 2006




1.

Install the software InkzonePerfect. Please check the manual „Quickstart InkzonePerfect and DI-Plot.pdf “. Copy the correct planetatemplate.dat file (check the number of keys) into the program directory.

2.

To run the TapeEmulator, InkzonePerfect needs to be configured like:

Setting	Function
1. Communication	Select the COM port and set the communication parameter as shown
2. Maximum value	Depending on the press, the 100% value for an ink key is either 100 or 256. Choose the correct 100% value. You might need to run a quick test to figure out the value for the press.
3. Faulty key	A press with a defect ink key, reports the key with a certain value, mostly like 99%. To ignore the error keys, enable the checkbox “Error correction on faulty ink key”. When enabled, set the error level.
4. Update Firmware	If necessary, it is possible to download a new Firmware to the Tape Emulator. Use for this, this checkbox.
5. Check connection	Gives the possibilities to reset and to check the communication with the Tape Emulator.
6. Planeta Color Information	Synchronizing the color setup at the Planeta console with InkzonePerfect. Select the button “COLOR” at the console to view the current setup.

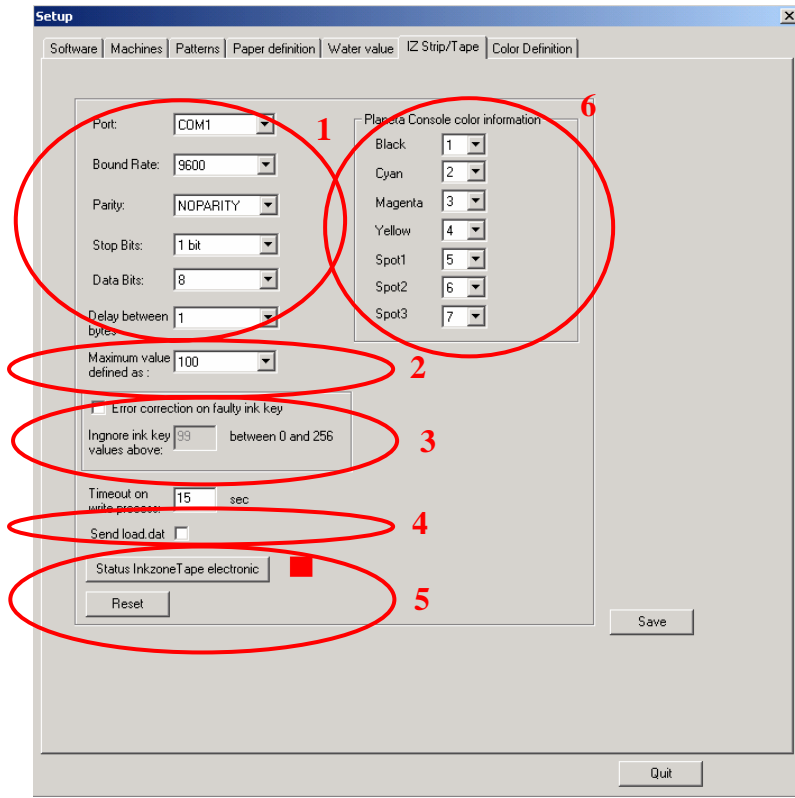

3.
Set the Water values for the press:

The screenshot shows a software interface for setting water values. The window title is "Setup". The "Water value" tab is selected and circled in red. Below the tabs, there is a table with 8 rows. The first column is labeled "Unit No." and the second column is labeled "Water value between 0 and 100". Each row contains the number 1 through 8 in the first column and the value 50 in the second column. The entire table area is circled in red. A "Save" button is located at the bottom right of the window.


Unit No.	Water value between 0 and 100
1	50
2	50
3	50
4	50
5	50
6	50
7	50
8	50

Save



4. Install the “Inkzone TapeEmulator” hardware box. Open the planeta press console.



4. Disconnect the tape drive

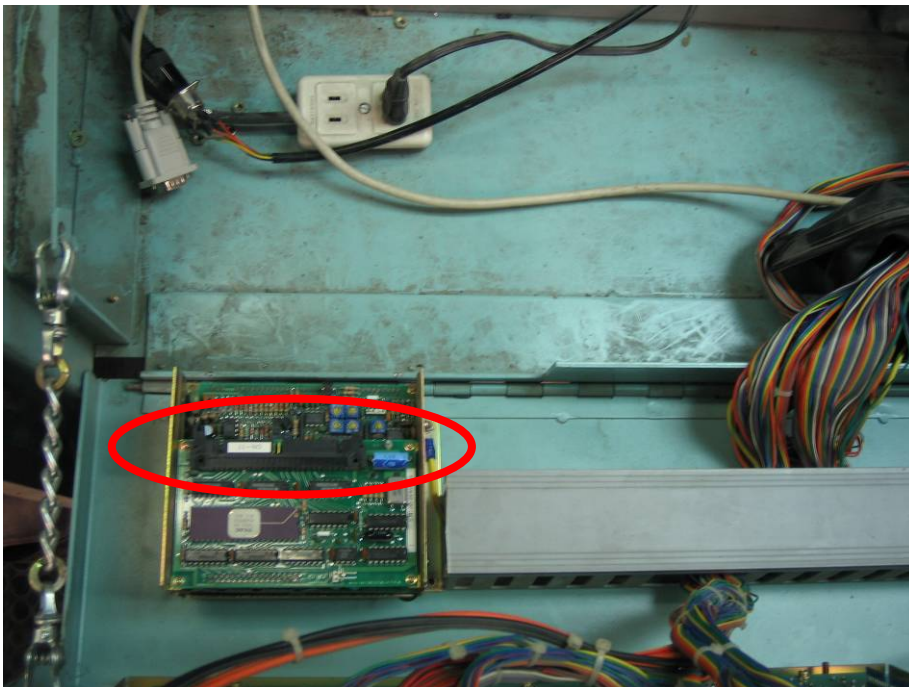

5. Connect the cable from the tape drive to the “Inkzone Tape Emulator”. Connect the serial communication port to the PC where InkzonePerfect is installed

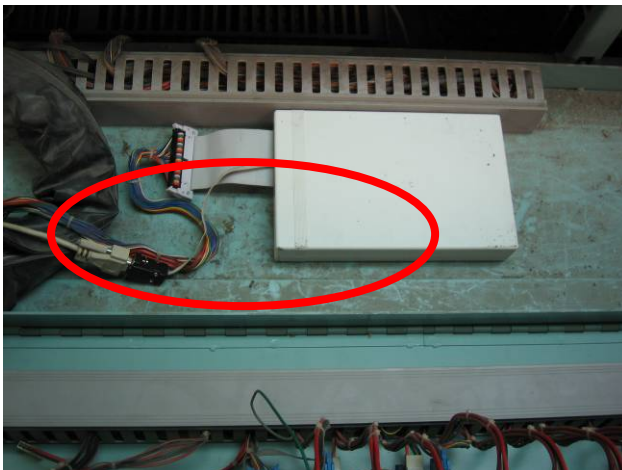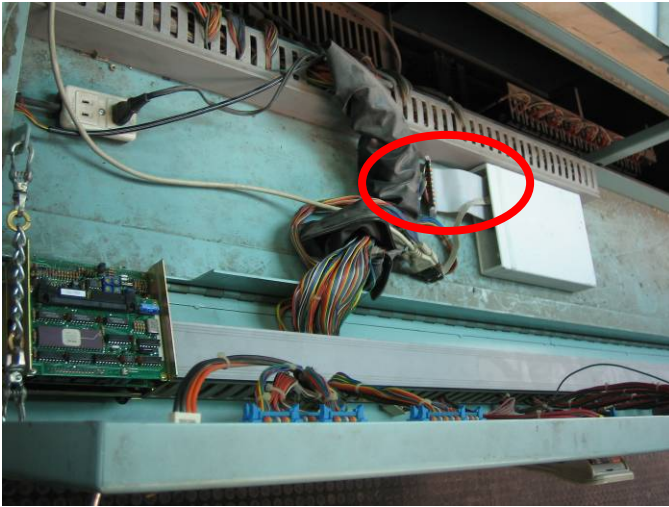

NOTE

For all operation from the press console to the InkzoneTape emulator, the software InkzonePerfect needs to run!

6.

Archive function: Store a job from the console to the „Inkzone Tape Emulator“

1. Start the InkzonePerfect software
2. Press button „Write Tape“ on the console
3. Press button „1“ on the keypad on the console
4. In the software open “File” → “Read from Inkzone Tape” and follow the steps.



NOTE

For all operation from the press console to the InkzoneTape emulator, the software InkzonePerfect needs to run!

7.

Load a job to the console

1. Start the InkzonePerfect software
2. In the software open "File" → "RUN" and follow the steps to send a job
3. Press button „Read Tape“ on the console

